



Simple snap action poster frame with stand. Ideal for information display, directional signage or product promotions.

features & benefits

- Freestanding poster holder
- Available in A4 and A3 sizes
- Aluminium with anodised silver finish
- Simple snap action poster frame
- Head rotates allowing portrait or landscape literature
- Quick assembly, breaks down for easy transportation



Loosen wing nut and rotate frame to convert between landscape and portrait format.



Sentry A3
(landscape)

Sentry A3

Sentry A4

hardware specifications	graphic specifications	additional info
<p>Sentry A4 (in portrait format) Assembled dimensions: 1005 (h) x 326 (w) x 245mm (d) approx Base dimensions: 326 x 245mm approx Weight: 2.4kg approx</p> <p>Sentry A3 (in portrait format) Assembled dimensions: 1075 (h) x 245 (w) x 325mm (d) approx Base dimensions: 325 x 245mm approx Weight: 2.5kg approx</p>	<p>Sentry A4 Poster dimensions: 210 x 297mm approx Visible dimensions: 190 x 277mm approx</p> <p>Sentry A3 Poster dimensions: 420 x 297mm approx Visible dimensions: 398 x 278mm approx</p>	<p>Finish: Anodised aluminium</p> <p>Clear protective sheet material: PVC</p> <p>Poster thicknesses: Snap frame is suitable for graphic substrates up to 1mm (0.039") thick</p>


Assembly Instructions



Kit includes: Snap frame, support post, base, 4 x Screws (2 in post), frame support, 1 x spanner



1 Unscrew wing nut from the back of the poster frame.

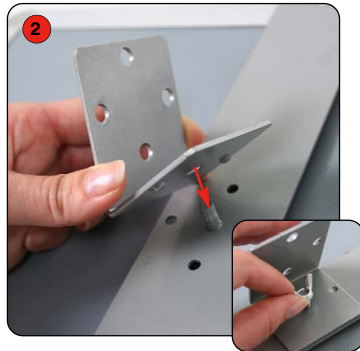

2 Slot the frame support over the protruding screw and replace the wing nut, tighten to secure fit.



3 Insert screws into base through the holes, then screw into the bottom of the support post.



4 Tighten each screw using the spanner provided.



5 Unscrew each screw from the top of the support post.



6 Place the frame support onto the top of the post, inserting both screws back into the post. Tighten to secure using spanner.



7 Open the snap frame sides.



8 Remove the clear protective cover.

